WiFi Configuration via Browser

Preparation

Power on the inverter.
- Make sure the router is turned on
- Switch on the WLAN of laptop.

1 Look for the WiFi signal "**Solar-WiFi***" *(*means the last 8 characters of the inverter SN)* in WLAN center and connect it. Password: **12345678**

Note

1

Please make sure there is no other devices connected to the same Solar-WiFi*.

2

The first indicator on the inverter cover should be double blink when connecting the "Solar-WiFi*".

WiFi Configuration via Browser

2

User Name: "**admin**"
Password: "**admin**"
Click "Log In" to enter configuration page
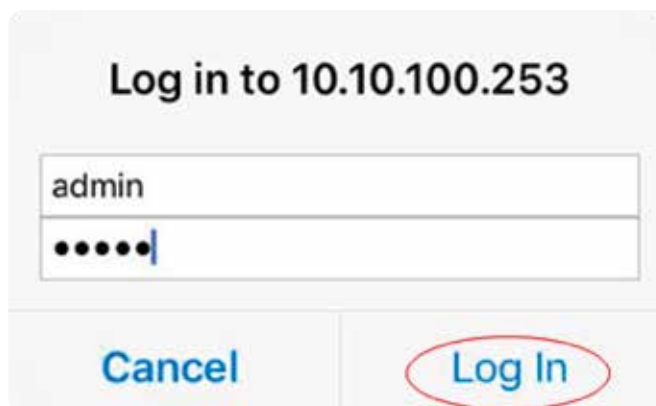Browse website: 10.10.100.253

Note

Please use browser "IE", "Google", "FireFox", "Safari".
Other browser cannot 100% sure ok forthe configuration.

3

User Name: "**admin**"
Password: "**admin**"
Click "Log In" to enter configuration page

WiFi Configuration via Browser

4 Click "**start Setup**"

Device information

Firmware verison		1.6.9.3.38.2.1.38
MAC address		60:C5:A8:60:33:E1
Wireless AP mode		**Enable**
	SSID	Solar-WiFi
	IP address	10.10.100.253
Wireless STA mode		**Disable**
	Router SSID	WiFi_Burn-in
	Encryption method	WAP/WAP2-PSK
	Encryption algorithm	AES
	Router Password	WiFi_Burn-in

Cannot join the network, may be caused by:

router doesn't exist, or signal is too week, or password is incorrect

★ **Help:**Wizard will help you to complete setting within one mimute.

Start Setup

5 Select Wi-Fi router's SSID and click "**Next**"

Please select your current wireless network:

SSID	Sec mode	Enc type	Channel	RSSI
⦿ WIFI Test	WAP2-PSK	AES	6	54%

★ **Note:** When RSSI of the selected WiFi Network is lower than 50%, the connection may be unstable, please select other available network or shorten the distance between the device and the router.
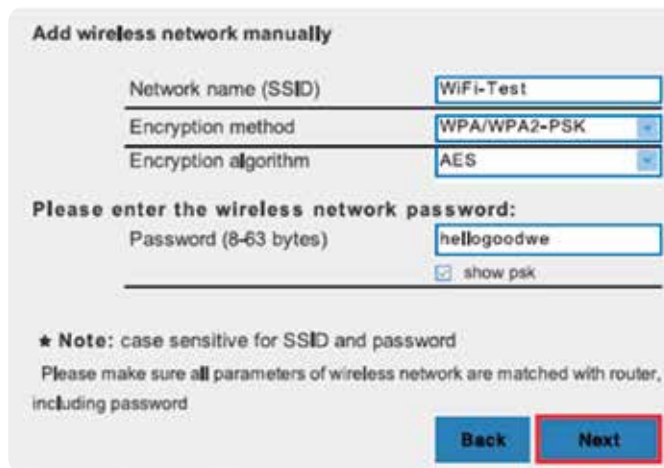
If your wireless router does not broadcast SSID, please click "Next" and add a wireless network manually.

Back **Next**

WiFi Configuration via Browser

6

Fill in the password for your WiFi network.
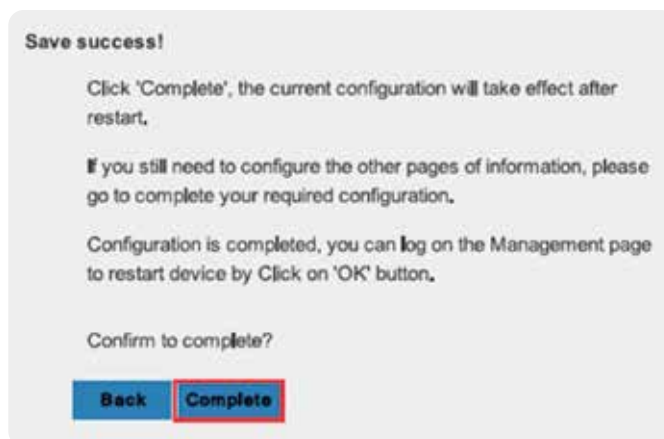
7

7. Click '**Complete**' and the configuration process completes.
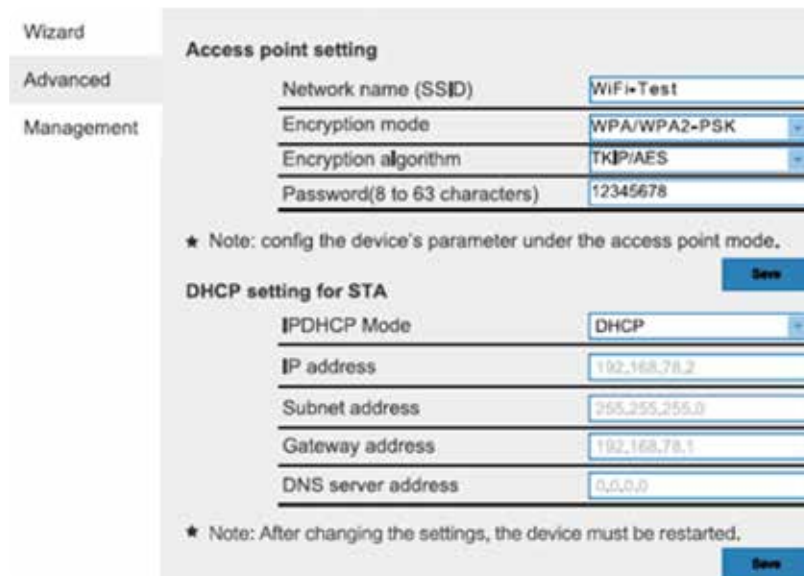

Note

You can modify the Wi-Fi module's SSID or/and password in the 'Advanced' interface.

WiFi Configuration via Browser

8 (Skip this step unless it Is necessary)

Access point setting

Network name (SSID)	WiFi-Test
Encryption mode	WPA/WPA2-PSK
Encryption algorithm	TKIP/AES
Password(8 to 63 characters)	12345678

★ Note: config the device's parameter under the access point mode.

Save

DHCP setting for STA

IPDHCP Mode	DHCP
IP address	192.168.78.2
Subnet address	255.255.255.0
Gateway address	192.168.78.1
DNS server address	0.0.0.0

★ Note: After changing the settings, the device must be restarted.

Save

Notice

The AP 'Solar-WiFi' might disappear after inverter connects to WiFi router. Turn offrouter or do 'WiFi Reload' operation via button on inverter if you need connect to Solar-WiFi once again.